



www.temprecord.com

## TEMPRECORD Reader Interface

### Serial RS-232 or USB Connectivity options available.

- ▶ Check Data Logger status using Temprecord for Windows (TRW) Application Software.
- ▶ Read and/or program your Temprecord Data Logger.
- ▶ View detailed Summary, Values, Statistics or Graph information using TRW.
- ▶ Start, stop, reuse or program Data Logger using TRW.
- ▶ Save data file to PC, Network Drive or WEB Server.
- ▶ Export to MS Excel – part or all samples.
- ▶ Optically isolated interface to Logger – no physical connection to Logger.
- ▶ Compatible with V2.13 or earlier Firmware or new Hi-Speed V2.14 Firmware Loggers.
- ▶ Temprecord for Windows (TRW) Software provided on CD with every Reader.
- ▶ TRW Software downloadable FREE from Temprecord website: [www.temprecord.com](http://www.temprecord.com)
- ▶ Earlier version of TRW for DOS and Windows 95/98 OS available.
- ▶ Compatible with Windows 2000/NT, Windows XP, Vista or Windows 7.

Parameter	Specifications
Case Protection	IP40 Rated Protection
Warranty Period	12 months from date of purchase
Dimensions	94 x 160 x 24mm (3.7 x 6.3 x 0.9 inches)
Weight	200 grams (7.05 ounces)
Case Colour	Grey
Full Logger functionality access using Temprecord for Windows Application Software	

### Temprecord International Limited

PO Box 58 430, Botany,  
Auckland 2163, New Zealand.  
Phone: +64 9 274 9825,  
Fax: +64 9 273 4020  
Email: [info@temprecord.com](mailto:info@temprecord.com)  
Web: [www.temprecord.com](http://www.temprecord.com)