



www.temprecord.com

TEMPRECORD Reader Interface

Serial RS-232 or USB Connectivity options available.

- ▶ Check Data Logger status using Temprecord for Windows (TRW) Application Software.
- ▶ Read and/or program your Temprecord Data Logger.
- ▶ View detailed Summary, Values, Statistics or Graph information using TRW.
- ▶ Start, stop, reuse or program Data Logger using TRW.
- ▶ Save data file to PC, Network Drive or WEB Server.
- ▶ Export to MS Excel – part or all samples.
- ▶ Optically isolated interface to Logger – no physical connection to Logger.
- ▶ Compatible with V2.13 or earlier Firmware or new Hi-Speed V2.14 Firmware Loggers.
- ▶ Temprecord for Windows (TRW) Software provided on CD with every Reader.
- ▶ TRW Software downloadable FREE from Temprecord website: www.temprecord.com
- ▶ Earlier version of TRW for DOS and Windows 95/98 OS available.
- ▶ Compatible with Windows 2000/NT, Windows XP, Vista or Windows 7.

Parameter	Specifications
Case Protection	IP40 Rated Protection
Warranty Period	12 months from date of purchase
Dimensions	94 x 160 x 24mm (3.7 x 6.3 x 0.9 inches)
Weight	200 grams (7.05 ounces)
Case Colour	Grey
Full Logger functionality access using Temprecord for Windows Application Software	

Temprecord International Limited

PO Box 58 430, Botany,
Auckland 2163, New Zealand.
Phone: +64 9 274 9825,
Fax: +64 9 273 4020
Email: info@temprecord.com
Web: www.temprecord.com